

Hangzhou Yile Shangyun Robot Technology Co. Ltd

LE308G Intelligent Coffee Vending Machine  
Routine Maintenance



After-Sales Service Support

2022. 03


# Content



1. Appearance
2. Requirements for Installation
3. To Open the Front Door
4. To Insert a SIM Card
5. To Load Coffee Beans
6. To Load Instant Powder
7. To Load Cups
8. To Load Lids
9. The Installation of Bottled Water
10. Routine Maintenance
11. The Instruction for Use
12. Ingredients
13. The Instruction of Background Operation
14. The Installation of Operating System
15. Common Issues and Solutions
16. The Instruction of the Multimeter



# Appearance

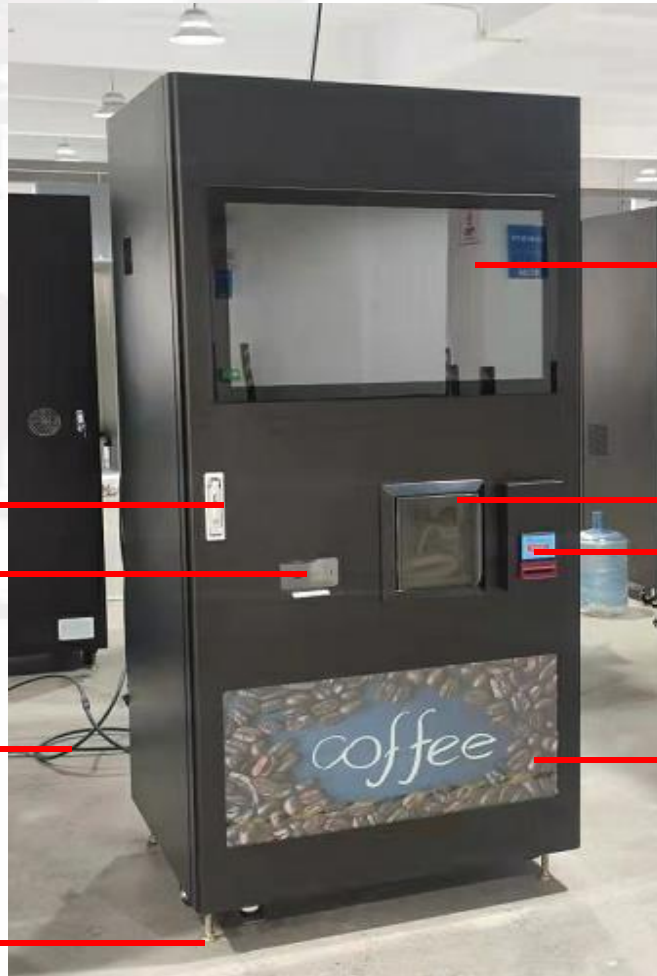

32-inch LCD touch screen

Door of cup dispenser

Bill acceptor

LED light box


Lock handle

Door of lid dispenser

Power cord

Feet

# Appearance

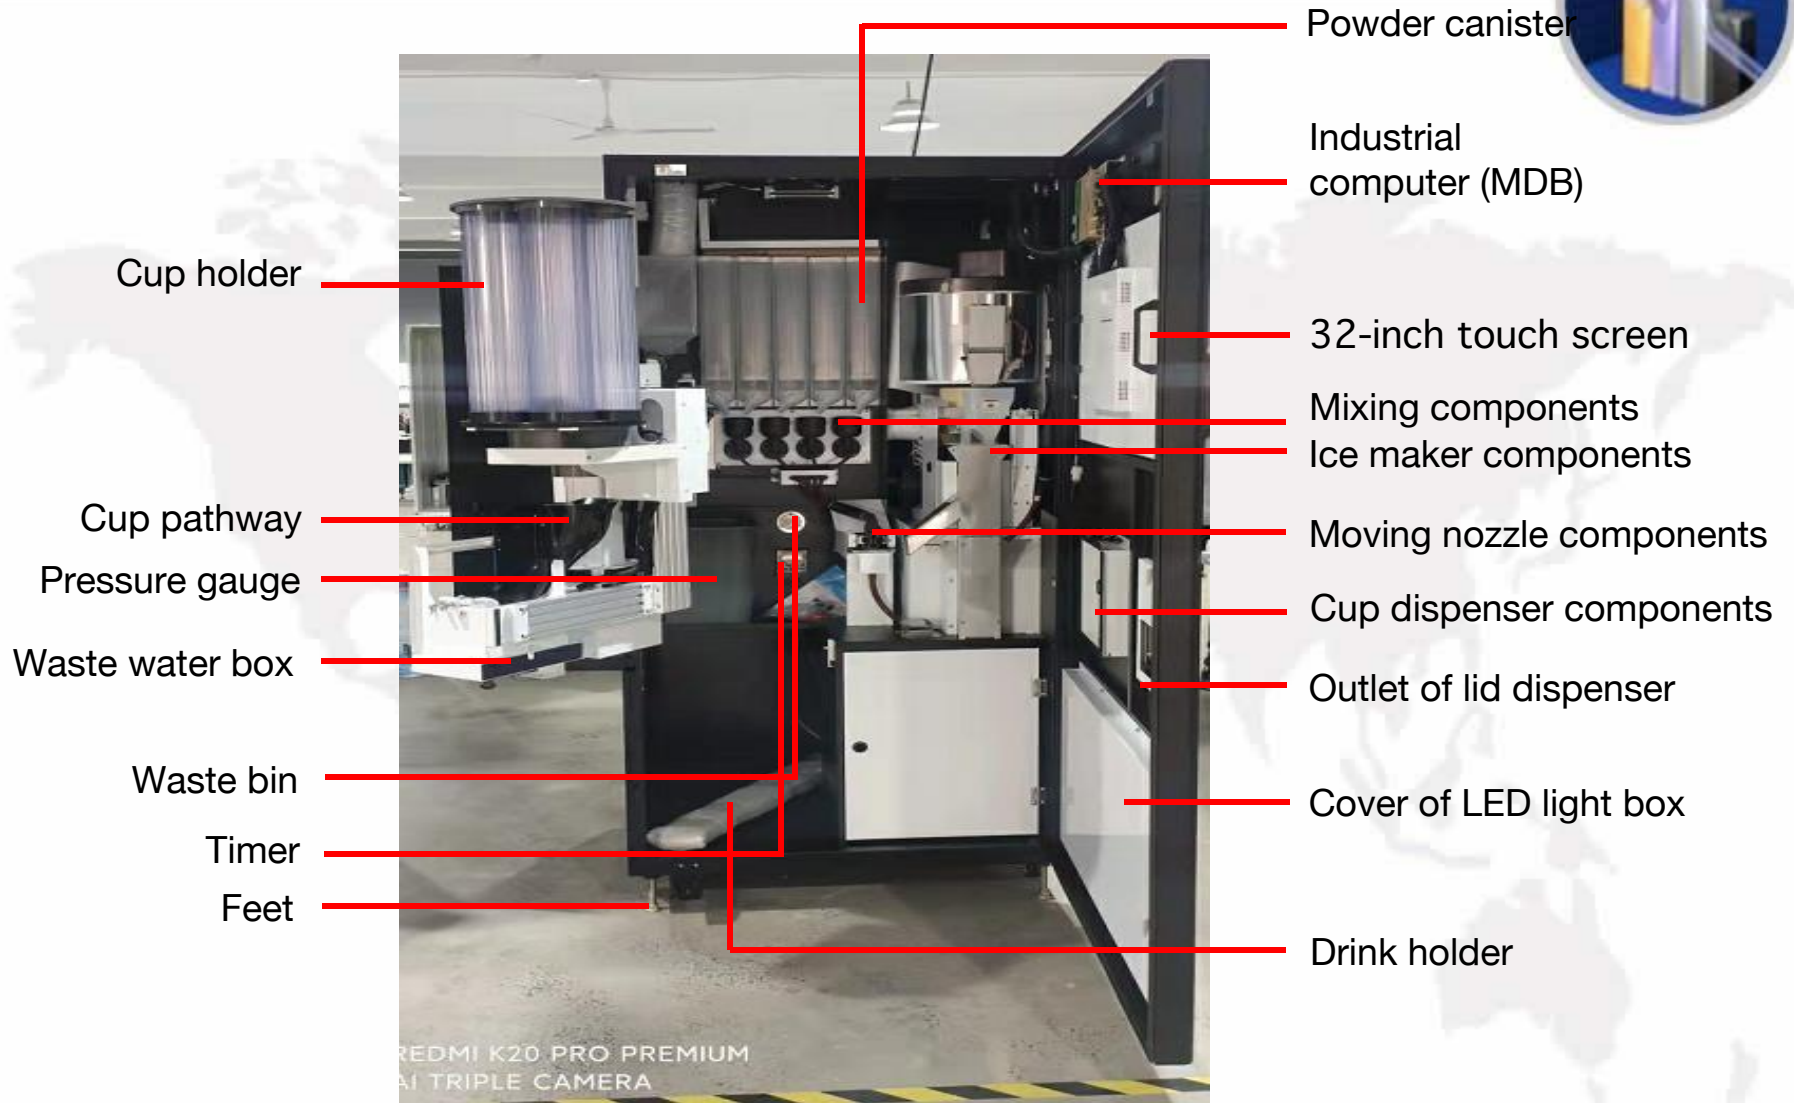

Cup holder

Cup pathway

Pressure gauge

Waste water box

Waste bin

Timer

Feet

Powder canister

Industrial computer (MDB)

32-inch touch screen

Mixing components

Ice maker components

Moving nozzle components

Cup dispenser components


Outlet of lid dispenser

Cover of LED light box

Drink holder

REDMI K20 PRO PREMIUM  
AI TRIPLE CAMERA

# Appearance

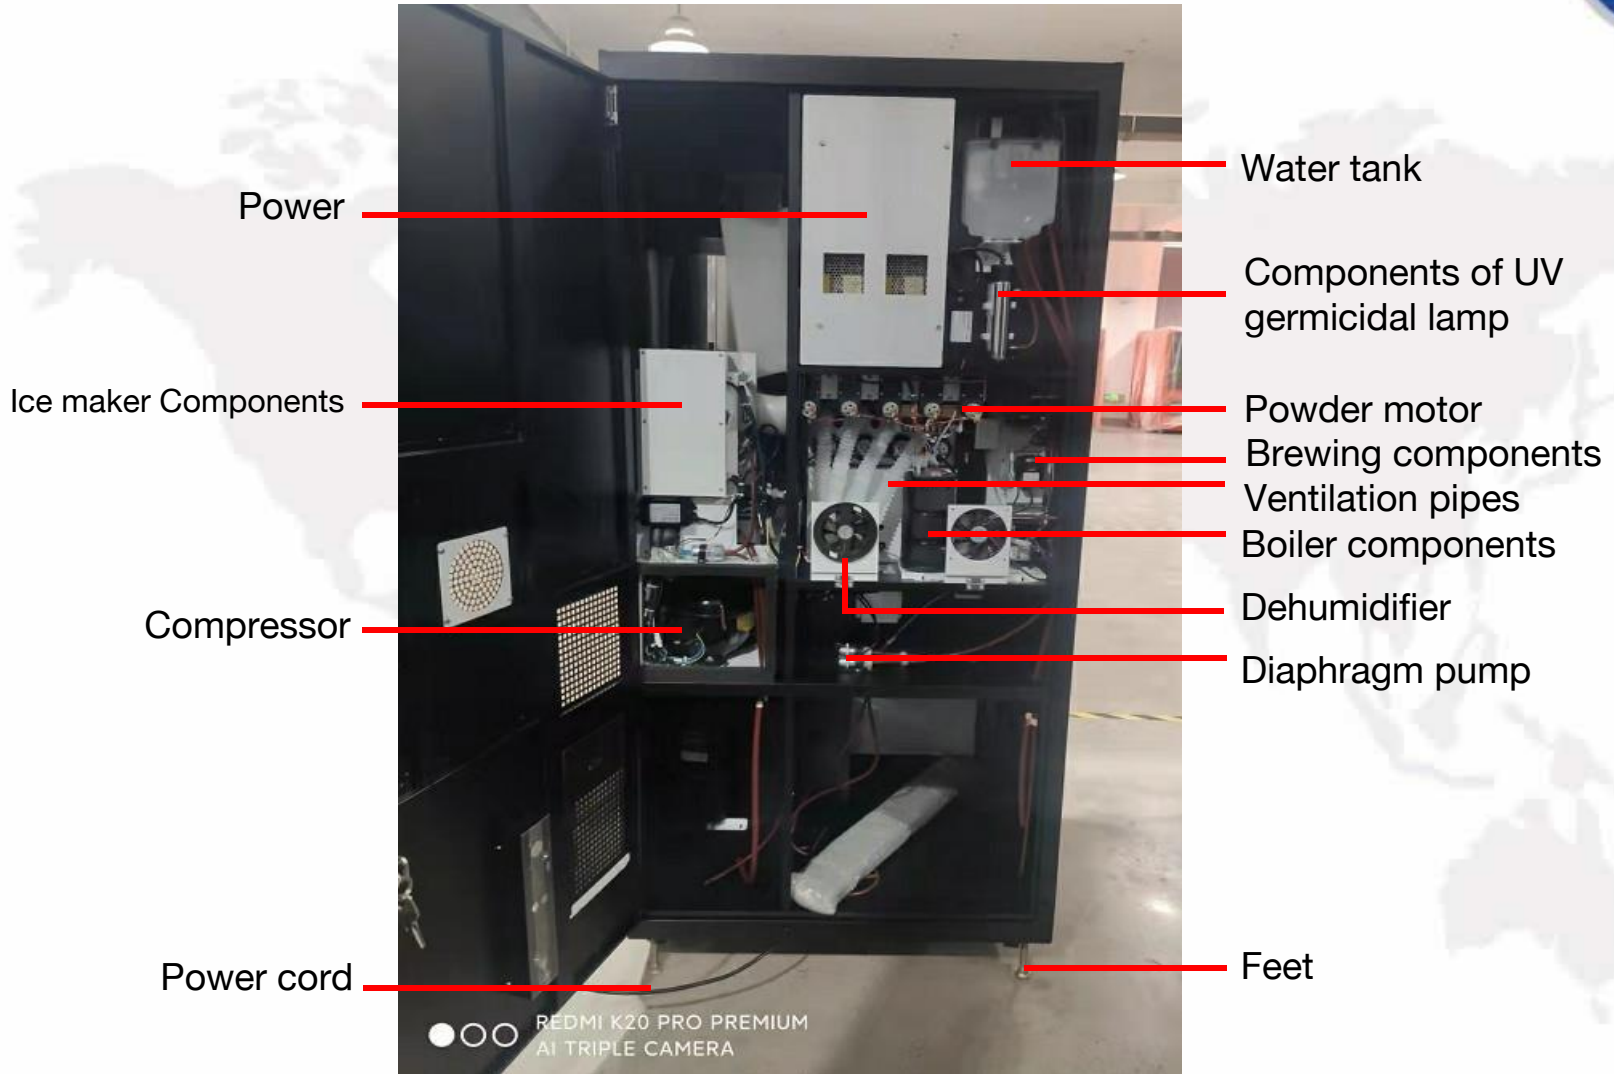

Power

Ice maker Components

Compressor

Power cord

Water tank

Components of UV  
germicidal lamp

Powder motor

Brewing components

Ventilation pipes

Boiler components

Dehumidifier


Diaphragm pump

Feet

# Appearance



Lid of ice bucket

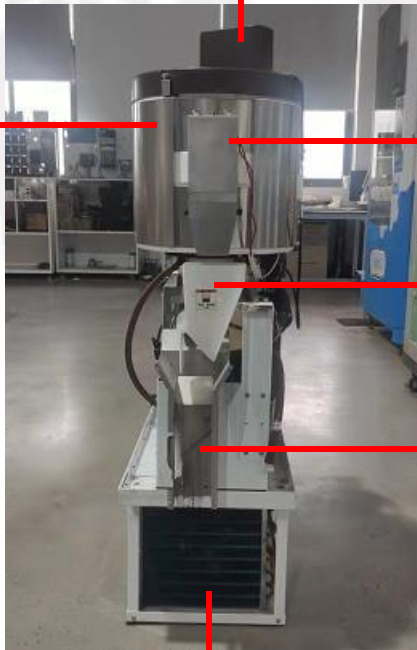

Ice Maker  
Ice bucket

Electromagnet of  
ice making

Ice weigher

Ice outlet

Condenser



Water tank

Components of UV  
germicidal lamp

Diaphragm pump  
for ice maker (DC  
24V)

Compressor

Electric box for ice maker

# Requirements for Installation



Please reconfirm safety precautions and installation conditions, and follow the instruction of installation as follows:

Illustration:



1. Please check that all the four feet of the machine have landed properly.
2. Screw the feet using a spanner to make the under surface of the machine horizontal, using a gradienter when necessary.
3. Cut open the cable tie, and plug the cable into a safe grounding receptable.
4. If extension cord is necessary, it should be operated by a professional electrician (ground wires are crucial).
5. Plug in and switch on the machine (with a sound of beep indicating that the machine is in motion).

# To Open the Front Door



1



2



3

1. Insert the corresponding key into the keyhole of the lock handle and turn the key anticlockwise.
2. Push the button below the handle so that the handle pops out. Hold and turn the handle anticlockwise and pull out the door.
3. Attention: the movement of twist and pull should be made simultaneously.



# To Insert a SIM Card



1



2



3

1. After opening the front door, switch off the industrial computer (MDB box) and prepare a standard size SIM (all telecom companies supported) as shown in Picture 3
2. The slot of SIM card is shown in Picture 2
3. Insert the SIM card into the slot and the insertion of SIM card is complete.

 
# To Load Coffee Beans



Hold the coffee bean house with both hands.



Lift it until it is out of its place.



Take out the coffee bean house carefully.


# To Load Coffee Beans



Hold the coffee bean house with both hands.



Open the lid.

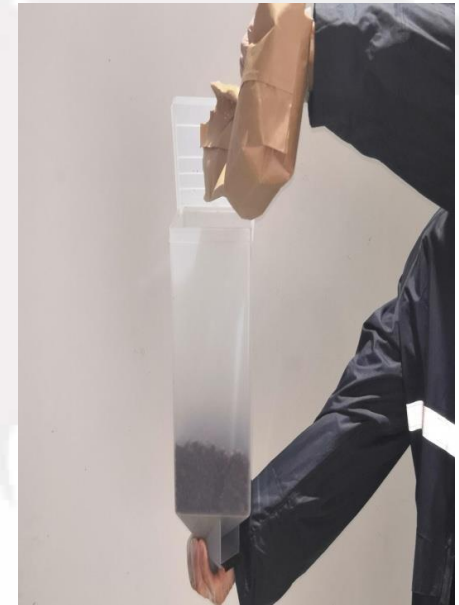

Pour coffee bean into it.

# To Load Coffee Beans



Attention:



Aim the hooks  
behind the  
bean house,



at the corresponding  
holes outside the  
machine.



Ensure the hooks  
should be in their  
respective holes.

# To Load Coffee Beans



Pinch the shield of the coffee bean house.



Pull out the shield.

# To Load Instant Powder




Hold the nozzle.



Turn the nozzle at 12 o'clock position.

# To Load Instant Powder

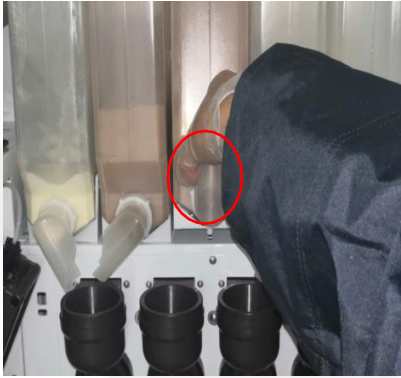

Hold and lift the nozzle in the front of the canister until the part circled has been detached.

Take out the canister.


Add powder into the canister.

**Suggestion: After adding powder, please label the canister accordingly in order not to get confused next time.**

Return the position of the nozzle.

Place the canister the other way round in place.

# To Load Cups

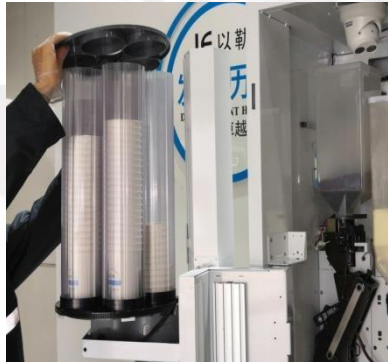

Take of the lid of the cup holder.



Put cups above the cup dispenser components.



Place them into the cup dispenser.



It is finished as shown below.

**Attention: Avoid crushing cups while adding them into cup holder.**



# To Load Lids



Hook the finger into the hole of the door of lid dispenser.



Pull open the door.

# To Load Lids



Hold the lids inside the machine (if there are) not to let them drop by accident using one hand and use the other hand to stack lids onto them.

It's done as shown in the picture below.

Close the door.

# Installation of Bottled Water



Place a bottled water into the machine and open it.



Use a tissue to wipe the pipe.



Stick the pipe into the bottled water.



It's done.


**Attention:** 3 bottles of water are needed for the following use:

1. 2 for the coffee maker.
2. 1 for the ice maker.

# Routine Maintenance



## Cleaning and Washing of the Mixing Components

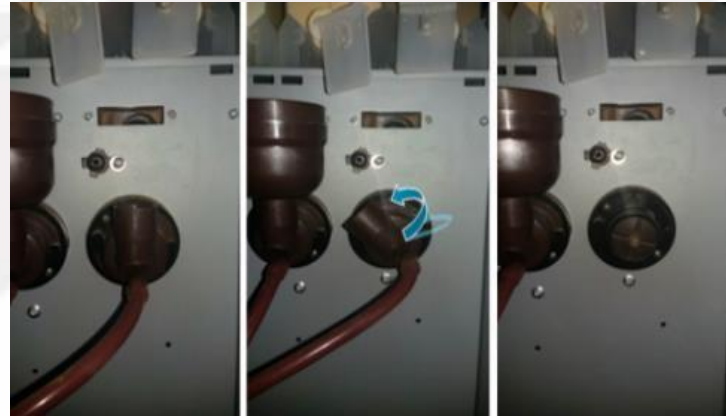

1. Detach the nozzle above the mixing bowl.
2. Pinch the upper part of the mixing bowl to separate and remove it.
3. Hold the mixing bowl, lift it slightly and unfasten it by turning it anticlockwise.

# Routine Maintenance



## To Detach and Install the Brewer



## To Detach the Brewer:

1. Unscrew the water pipe head labelled with 4 as shown and pull out the pipe labelled with 3 in the direction shown.
2. Untighten the screws with label 1 and 2 by turning them anticlockwise.
3. Hold and pull out the entire brewer with care as shown in the picture below


## To Install the Brewer:

1. Aim the hole 8 at the hole 6, 10 at 7, 9 at pin 5. Note that, along with the wheel, the hole 9 is adjustable in which the pin 5 fits better.
2. When they are all in place, twist and tighten the screw 1 and 2 in the opposite direction.
3. Test the function of the brewer and it is all finished.

# Instruction for Use






To Power on the Machine and Expel Unnecessary Air

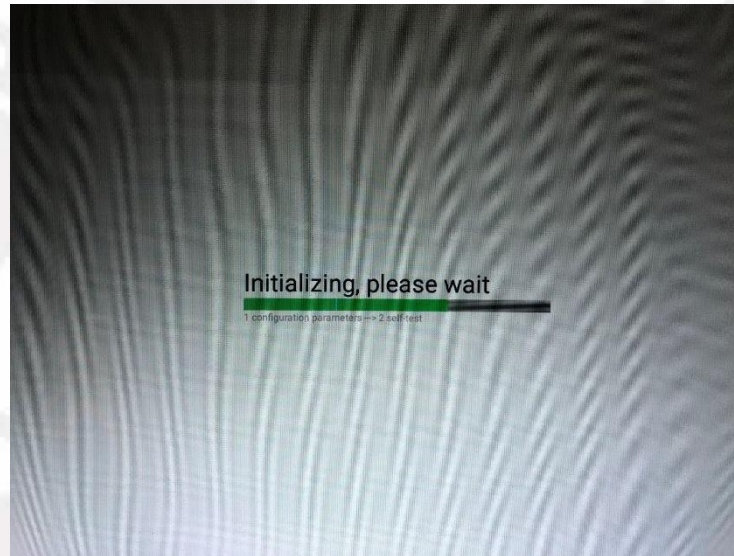

When the machine is ready, plug it into a grounding receptacle, and switch on the machine at its back. The launch page will appear on the screen. It is necessary to expel air from the boiler until the water flow runs smoothly in the water pipe when the machine has been started for the first time.

# Instruction for Use

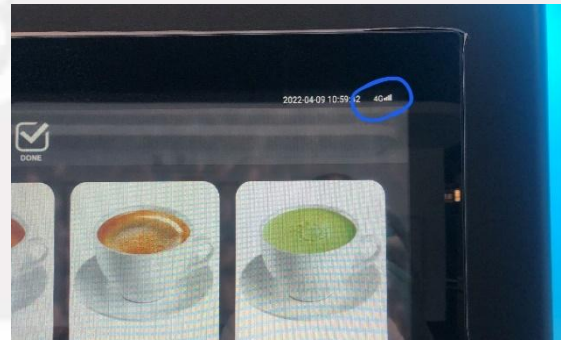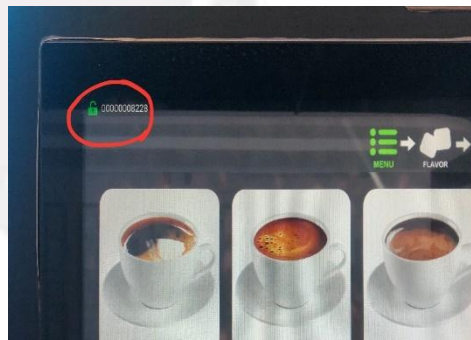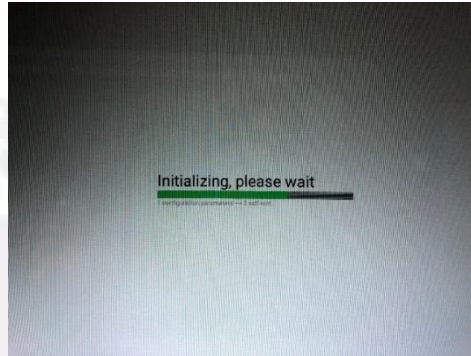

After all the air has been expelled, the launch page will appear and last about 5 seconds and will be ready for use. If it is connected to the internet, there will be a green icon resembling an unlocked lock at the top-left corner circled in red. Then the icon of network (Wi-Fi, 4G, 3G, etc.) will be shown accordingly at the top-right corner circled in blue.

# Instruction for Use




To make a purchase, select the drink you would like, and select the payment you prefer.



# Instruction for Use



## To Enter the Setting Interface



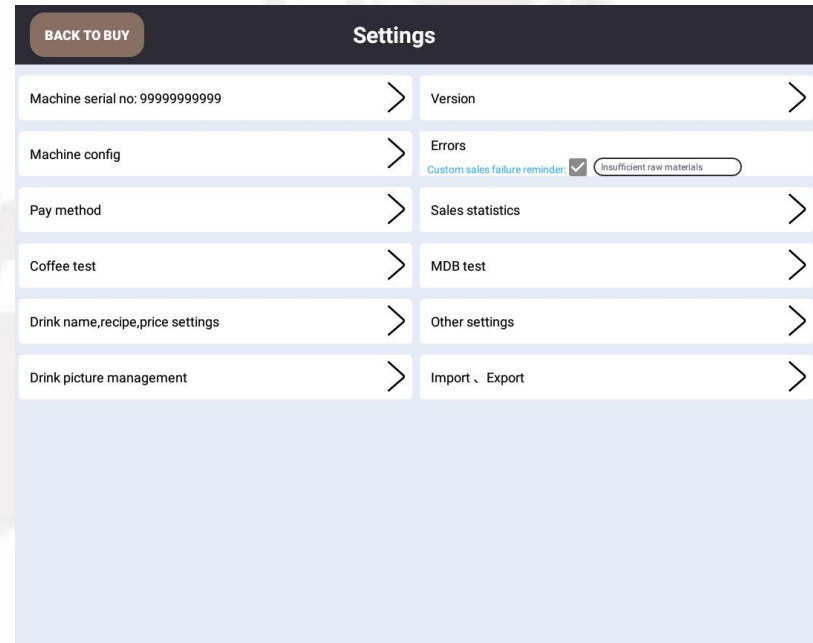


Machine in standby mode, open the front door of the machine, push and hold for 3 seconds the grey mode button on the industrial computer (MDB) until the setting menu appears.

# Instruction for Use



## To Check the Device ID


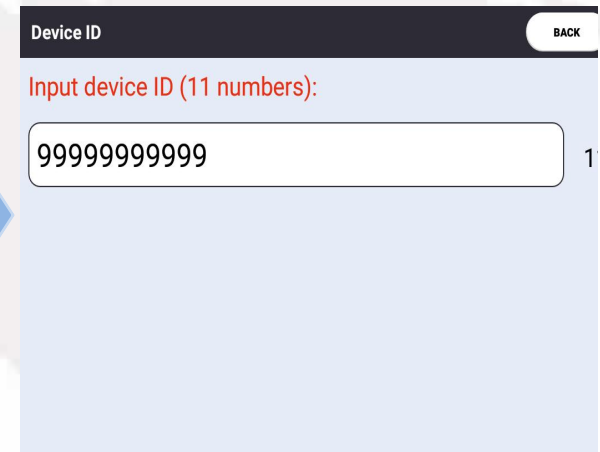
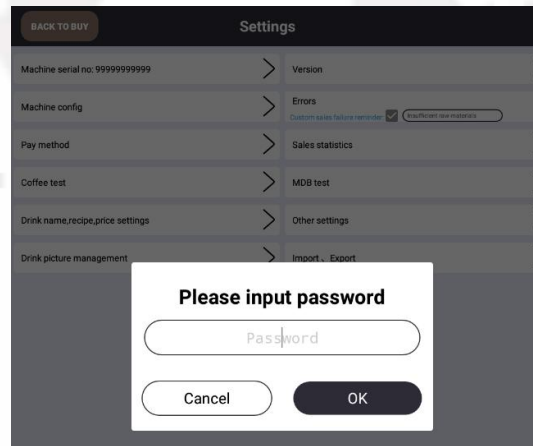
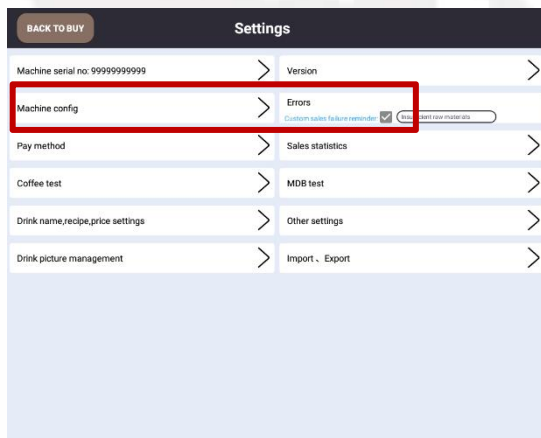


The device ID of the industrial computer is an unique identification number and is also an unique number for background operation. To check it, the default password is 352356. Please contact administrator before changing the password.

# Instruction for Use



## Configuration

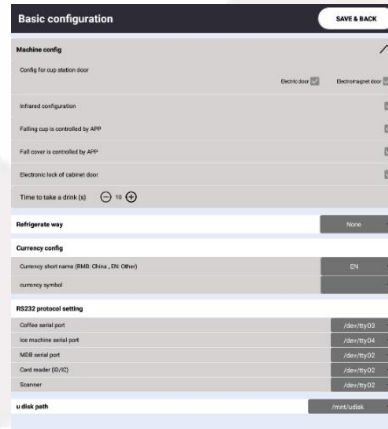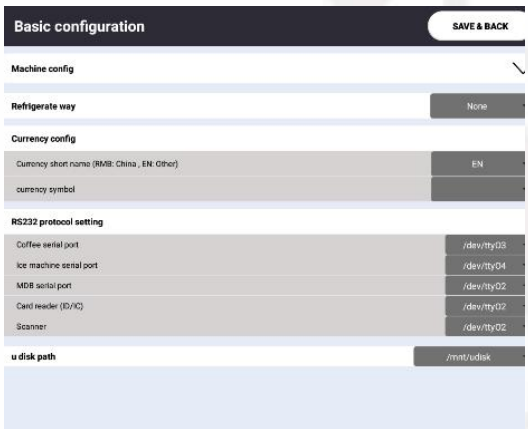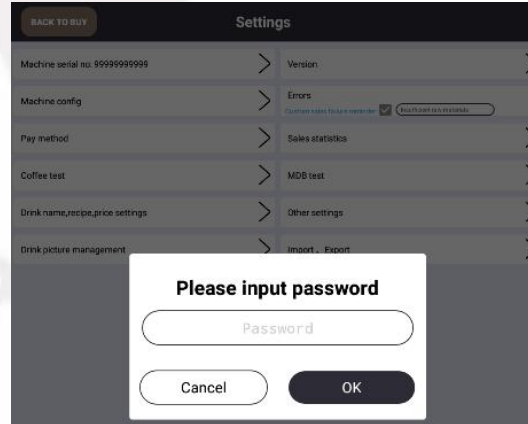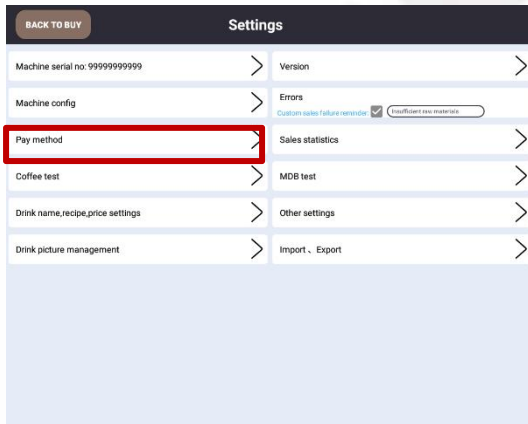

The information under this option is not to be checked. If there's a need, please contact the administrator first.

# Instruction for Use



## Payment

**BACK TO BUY** Settings

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
Pay method	>	Sales statistics	>
<b>Coffee test</b>	>	MDB test	>
Drink name, recipe, price settings	>	Other settings	>
Drink picture management	>	Import, Export	>

**BACK TO BUY** Settings

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
Pay method	>	Sales statistics	>
Coffee test	>	MDB test	>
Drink name, recipe, price settings	>	Other settings	>
Drink picture management	>	Import, Export	>

**Please input password**

Password

Cancel OK

**Pay method** **SAVE & BACK**

Payment mode Free mode  Pay

Default payment method None

Cash  [Bill acceptor & Coin changer Config](#)

Allpay brush face

Allpay Scanner  QR code

Wechat Scanner  QR code

Shou Qian Ba Scanner  QR code

Pick up code

China UnionPay

Card payment (VISA)

ID card

IC card  [Order no:](#)

Third party

This option is for setting pay method. The default password is 352356. Please contact the administrator before changing it.

# Instruction for Use



## Test of Coffee Brewing

Settings

BACK TO BUY

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
Pay method	>	Sales statistics	>
Coffee test	>	MDB test	>
Drink name, recipe, price settings	>	Other settings	>
Drink picture management	>	Import , Export	>

Coffee test (This interface is for testing only.)

BACK

GRINDER MOTOR ELECTROMAGNETIC VALVE

BREWER MOTOR UP BREWER MOTOR DOWN

WATER PUMP (100ML) EXHAUST (1000ML) CLEAN BREWER CLEAN ALL

OPEN CUP DOOR CLOSE CUP DOOR FALL CUP FALL LID FALL STICK MOVING NOZZEL OUT MOVING NOZZEL IN

Current water temperature: °C

Max. water temperature: °C

Min. water temperature: °C

Surplus water volume: ml

Error code:

Current action:

Results:

Machine state:

Current configuration:

Refresh time:

Execute results

2022-04-15 13:17:14.958 Machine connect state: true

RESET DEVICE

ALL FAULTS

The test interface shows the condition and the test result of the machine. Frequently used information can be seen as to ventilation, cleaning system of grinding components, cleaning system of mixing components, test of beverage, temperature of the boiler, current working condition, synchronization of parameter. Try not use any functions other than those mentioned above.

# Instruction for Use



## Settings for Product Name, Prices and Recipes

**Settings**

Machine serial no: 9999999999 > Version >

Machine config > Errors  
Custom sales failure reminder:  Insufficient raw materials

Pay method > Sales statistics >

Coffee test > MDB test >


**Drink name,recipe,price settings** > Other settings >



Drink picture management > Import , Export >



**Drink name,recipe,price settings** **BACK** **SAVE**

**ADDING A DRINK** GET FACTORY RECIPE Price decimal point quantity Default Download and update all drinks

Drink1 Name Espresso Price 20  >

Drink2 Name Americano Price 20   >


On setting page, the name of beverage, price, recipes, and the number of beverage made at a time can be altered.

The number of beverage made at a time can be altered at the request of consumers with the minimum of 1. The name and price of beverage can be altered directly here. Note that the price must be no less than 0.01 when e-payment is involved.





## The Arrangement of Illustrations of Coffee

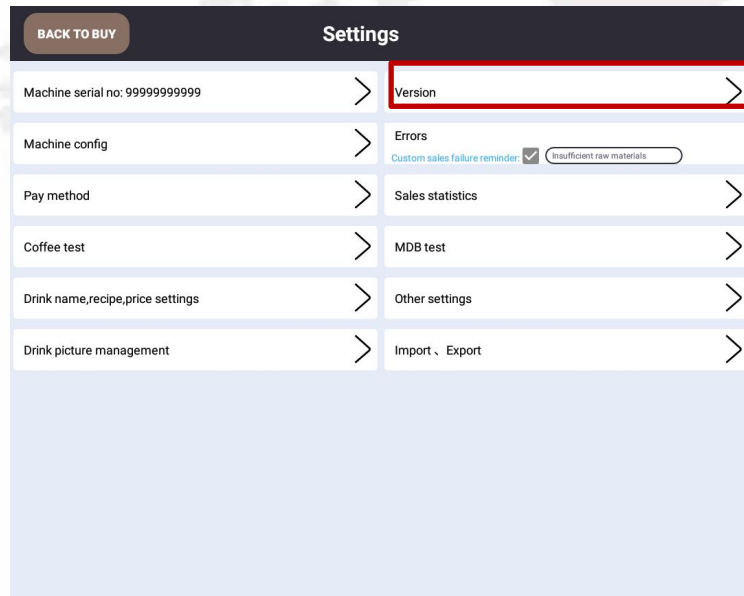


Yile is dedicated to the improvement of products, updating the version of its software from time to time. The information of updates will be shown here if there are any updates. It is preferred to check and update the software version. If it cannot be updated, please contact the provider of the service.



# Instruction for Use



## To Check Issues

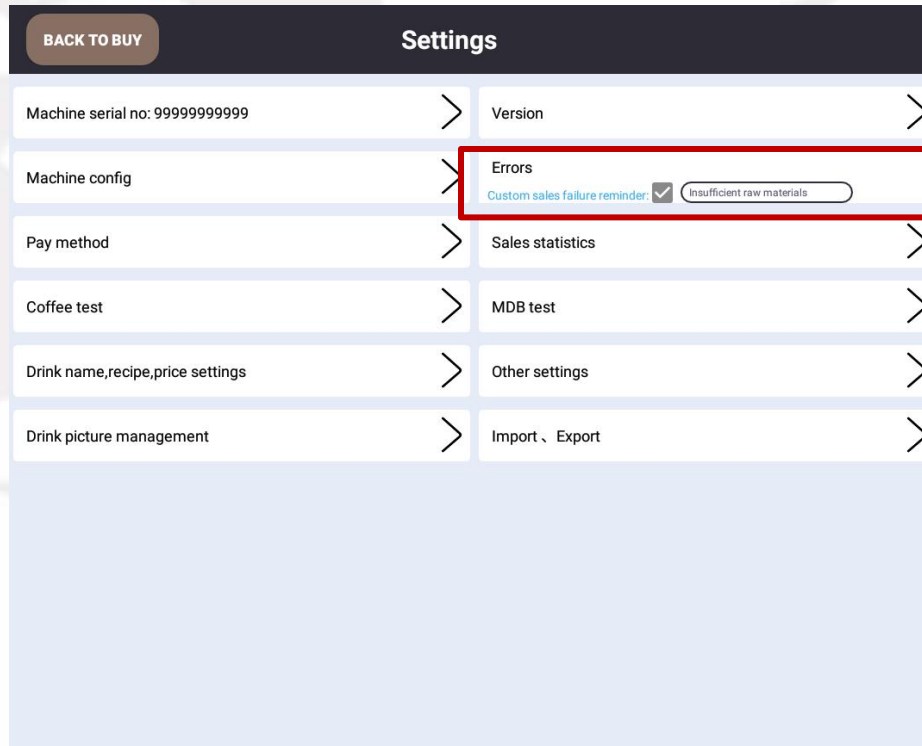

Error codes will appear when the machine has issues. They should be solved by rebooting the machine. The details will be shown in the picture above.

# Instruction for Use



## Sales Statistics

The screenshot shows a 'Settings' menu with a 'BACK TO BUY' button. The menu items are:

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
Pay method	>	<b>Sales statistics</b>	>
Coffee test	>	MDB test	>
Drink name, recipe, price settings	>	Other settings	>
Drink picture management	>	Import , Export	>

The 'Sales statistics' item is highlighted with a red box. A blue arrow points from this item towards the right-hand screenshot.

The screenshot shows the 'Sales statistics' page with a 'BACK' button. The page features a 'CLEAR SALES RECORDS' button, a search bar with a dropdown menu set to 'All', and a search button. The search bar contains the text 'Drink name\Drink no\Order no\Time\Pay method'. Below the search bar, there is a 'Sale start time:' label and a blue note: 'It will save the sales data of recent 3 months and clear the sales data automatically every time restart the machine.' On the right side, there are two data points: 'Total sales (cup) 0' and 'Total sales (amount)'. At the bottom right, there is a label 'Total number of articles'.

On the page of sales statistics, information such as sales figures, turnover and real time transactions can be checked, all of which can be reset. The sales figures on a daily or monthly basis can be viewed and exported in the background.

# Instruction for Use



## Test of MDB

**BACK TO BUY** **Settings**

Machine serial no: 9999999999 >	Version >
Machine config >	Errors Custom sales failure reminder: <input checked="" type="checkbox"/> Insufficient raw materials
Pay method >	Sales statistics >
Coffee test >	MDB test >
Drink name,recipe,price settings >	<b>Other settings &gt;</b>
Drink picture management >	Import , Export >

Do not use this test.

# Instruction for Use



## Other Settings

**Settings** BACK TO BUY

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
Pay method	>	Custom sales failure reminder: <input checked="" type="checkbox"/> <input type="text" value="insufficient raw materials"/>	>
Coffee test	>	Sales statistics	>
Drink name, recipe, price settings	>	MDB test	>
Drink picture management	>	<b>Other settings</b>	>
		Import, Export	>



**Other settings** SAVE & BACK

Advertising config >

Sales of goods (1~10) **Row**  **Column**

Show sales steps diagram

Goods background  White  Transparent

Sounds (start and finish making drinks)

Save log

Clear cache  
0.00KB >

This is an optional feature. It can play ads. Contact administrator if need be.

# Instruction for Use



## Import and Export Information

**BACK TO BUY** **Settings**

Machine serial no: 9999999999	>	Version	>
Machine config	>	Errors	>
		Custom sales failure reminder: <input checked="" type="checkbox"/> Insufficient raw materials	
Pay method	>	Sales statistics	>
Coffee test	>	MDB test	>
Drink name, recipe, price settings	>	Other settings	>
Drink picture management	>	<b>Import , Export</b>	>

**Import , Export** **BACK**

**EXPORT THE CONFIGURATION**

Export the coffee configurations of the software to the file of vm/config of U disk.(Powder box configuration, sugar formula, coffee recipe, temperature configuration, clean configuration)

**IMPORT THE CONFIGURATION**

Import the coffee configurations of the file of vm/config of U disk to the software.(Powder box configuration, sugar formula, coffee recipe, temperature configuration, clean configuration)

**IMPORT VIDEOS AND PICTURES**

- Build a folder in U disk: vm.
- Drinks pictures: place them under the file of vm/goodsimg in the U disk; firstly build a folder goodsimg under the vm folder, and then put the drink pictures into the goodsimg file.  
(1) Named name.png, the recommended size is 400\*400px.
- Sales advertising map, advertising video: Place it under the file of vm/salesres in the U disk; firstly build an folder salesres under the vm folder, there put the pictures and videos under the salesres file.  
(1) Sales advertising map: named s1.png, s2.png ...the recommended number is less than 10, the recommended size is 1000\*900px, the recommended size is less than 3MB.  
(2) Sales advertising video: named s1.mp4, only supports one video, the recommended aspect ratio is 100:59, the recommended size is less than 50MB.
- Standby advertising map, advertising video: Place it under the file of vm/waitres in the U disk; firstly build an folder waitres under the vm folder; then put the pictures and videos under the waitres file.  
(1) Standby advertising map: named w1.png, w2.png ... the recommended number is less than 5, the recommended size is 1920\*1080px, the recommended size is less than 3MB.  
(2) Standby advertising video: named w1.mp4, only supports one video, the recommended aspect ratio is 1920:1080, the recommended size is less than 30MB.
- Drinking advertising map, advertising video: Place it under the file of vm/outres in the U disk; firstly build an folder outres under the vm folder; then put the pictures and videos under the outres file.  
(1) Drinking advertising map: named t1.png, t2.png ... the recommended number is less than 5, the recommended size is 1920\*1080px, the recommended size is less than 3MB.  
(2) Drinking advertising video: named t1.mp4, only supports one video, the recommended aspect ratio is 1920:1080, the recommended size is less than 30MB.
- Payment icon: Place it under the vm/appkey file in the U disk; firstly build a folder appkey under the vm folder; and then put the third-party payment icon under the appkey file.  
(1) Third-party payment icon: named threepay1.png... threepay6.png, up to 6, the recommended size is 200\*200px.
- Card payment icon: named cardpay.png, the recommended size is 200\*200px.
- Other: Place it under the vm/vmres file in the U disk; firstly build a folder vmres under the vm folder; and then put the pictures under the vmres file.  
(1) Background pictures: named salelog.png, the recommended size is 1920\*1080px.  
(2) LOGO pictures: named salelogo.png, recommended height of 100px.  
(3) Drinks start making prompt voice: named drinkstart.mp3, the recommended size is less than 10KB.  
(4) Voice prompt for end of beverage preparation: named drinkend.mp3, the recommended size is less than 10KB.
- If failure to import, the vm file of the U disk can be copied directly (the file has been operated according to the above steps) to the sdcard file of the industrial computer.

The interim video during brewing and pictures of screensaver, background and products can all be replaced with those imported via USB drive according the related instruction.

# To Connect to the Internet



## Installation of SIM

1



2



3



4



5



Power off the machine first

1. Remove the antenna and find the SIM slot as shown in the picture.
2. Stick into the hole painted in yellow beside the slot using a thin object.
3. Pull out the SIM tray.
4. Place a SIM card into the tray.
5. Insert the tray into the industrial computer, install the antenna and power on the computer.

# To Connect to the Internet



## Wi-Fi Connection

1. As the machine is in motion, push the mode button.

2. Exit the settings page.

3. Now the screen shows the system interface. Click the settings button.

4. In wireless network section, switch on Wi-Fi. The computer is searching for Wi-Fi nearby, click and join a Wi-Fi available.

Note: the account and password of the Wi-Fi to be joined should be known first.

# Recipes



## Recipes for Beverages

No. of Canister	6 (coffee bean)	1 (black tea)	2 (milk foam)	3 (flat white)	4 (cocoa powder)	5 (sugar powder)
No. of beverage	Name	(No. of canister)	Amount (s)	Water (mL)	Time of Mixing	Water (mL)
Beverage 1	Latte Macchiato	2	5	100	0	230 mL
		6		50	0	
		6		50	0	
		4	1	30	0	
Beverage 2	Espresso Macchiato	6		50	0	230 mL
		2	3	50	0	
		4	2	50	0	
		6		50	0	
		5	1	30	0	
Beverage 3	Coffee Latte	2	3	80	0	230 mL
		6		60	0	
		6		60	0	
		5	1	30	0	
Beverage 4	Cappuccino	6		50	0	230 mL
		2	3	100	0	
		6		50	0	
		5	1	30	0	
Beverage 5	Latte Macchiato	2	5	100	0	230 mL
		6		50	0	
		6		50	0	
		5	1	30	0	
Beverage 6	Chocolate Milk	4	5	100	0	230 mL
		2	5	100	0	



# Recipes



Beverage 7	Espresso	6		50	0	130 mL
		6		50	0	
		5	1	30	0	
Beverage 8	Black Tea	1	5	200	0	230 mL
		5	1	30	0	
Beverage 9	Milk Tea	2	3	100	0	220 mL
		1	2	90	0	
		5	1	30	0	
Beverage 10	Chocolate Latte	6		50	0	230 mL
		2	3	70	0	
		4	1	30	0	
		6		50	0	
		5	1	30	0	
Beverage 11	Americano	6		100	0	230 mL
		6		100	0	
		5	3	30	0	
Beverage 12	Chocolate Espresso	4	2	40	0	170 mL
		6		50	0	
		6		50	0	

# Recipes



Beverage 13	Flat White	3	5	200	0	150 mL
		5	1	30	0	
Beverage 14	Hot Chocolate	4	6	200	0	230 mL
		5	1	30	0	
Beverage 15	Hot Milk	2	5	200	0	230 mL
		5	1	30	0	
Beverage 16	Hot Water	1		110	0	230 mL
		2		30	0	
		3		30	0	
		4		30	0	
		5		30	0	

# Instruction of Background Operation



## 1. Homepage of Background Operation:

<http://ylvm.levending.net/ylvm/login.jsp;jsessionid=0F07D10F775D18C267990BC4AB8F8888>

以勒新零售平台

2021年1月1号之前的数据将在2022年5月1

Background page Refresh Operations

The information about machines and transaction

An overview of the system

Version information:	v1.6.7
Weather:	杭州 今天(周二): 19~33℃多云 明天(周三): 16~22℃中
Website address:	以勒官网 ID卡后台地址
Current login user:	客户培训
Current operator:	客户培训账号

Data statistics

On-line:0	Off-line:2	Total machine:2
-----------	------------	-----------------

Important notice **NEW NEW NEW**

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询,请及时导出数据并保存!(Attention please! All the data before Jan. 1, 2021 on the LE platform will be closed on May 1, 2022, please export the data and save in time!)

Data statistics

sales

Monthly sales data

Daily sales data

Sales amount

Legend: Sales (blue), Sales amount (orange), Profits (red)

# Instruction of Background Operation



## 2. Personal Center

2021年1月1号之前的数据将在2

Background page Change password x Refresh Operations

change password

username khtest@qq.com

new password Please enter a new password

Confirm password Please enter the new password again

Login immediately Reset

Personal center

Change password

Log information

Pay unit

User management

Equipment

设备电子锁管理

Sales record

Sales statistics

Goods

PUSH

Coffee recipe

BUG and suggestion

Renew manage

System manage...

The username can't change, but the password is changeable

Personal center includes two parts: change password and log information

# Instruction of Background Operation



以勒新零售平台

! please! All the data before Jan. 1, 2021 on the LE platform will be closed on May 1, 2022 ,please export the data and save in time!

Background page Change password Log information Refresh Operations

Email:  Query

Log information shows the operation information such as when did the you log in to the background and make any changes

Num	Email	Operating time	Operating IP	Specific operation
1	khatest@qq.com	2022-04-12 13:58:09	122.224.68.98	登陆
2	khatest@qq.com	2022-04-12 13:55:57	122.224.68.98	登陆
3	khatest@qq.com	2022-04-12 13:50:57	122.224.68.98	登陆
4	khatest@qq.com	2022-04-12 13:44:04	122.224.68.98	登陆
5	khatest@qq.com	2022-03-31 15:46:47	180.111.215.147	登陆
6	khatest@qq.com	2022-03-22 10:06:11	180.111.215.147	登陆
7	khatest@qq.com	2022-03-15 16:06:09	122.224.68.98	登陆
8	khatest@qq.com	2022-03-15 16:05:46	122.224.68.98	登陆
9	khatest@qq.com	2022-03-09 16:28:25	122.224.68.98	登陆
10	khatest@qq.com	2022-03-02 19:59:50	122.224.68.98	登陆
11	khatest@qq.com	2022-03-02 19:51:13	122.224.68.98	登陆
12	khatest@qq.com	2022-02-25 18:11:51	122.224.68.98	登陆
13	khatest@qq.com	2022-02-25 16:31:32	122.224.68.98	登陆
14	khatest@qq.com	2022-02-25 16:04:42	122.224.68.98	登陆
15	khatest@qq.com	2022-02-22 13:22:57	122.224.68.98	登陆

Previous 1 2 3 4 5 ... 76 Next 共 1134 条 15 条/页

# Instruction of Background Operation



## 3. Management of Collection

以勒新零售平台 2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询，请及时导出数据并保存！(Attention please! All the data before Jan. 1, 2021 c

Background page pay settings Refresh Operations

Receiving unit name: Receiving unit ID: WeChat public platform application ID(AppID): Alipay service window(App ID): Query Increase

**2, Add new pay unit**

Num	Editor	Delete	Configure alipa...	Configure WeC...	配置ID卡	Receiving unit ID	Receiving unit name	address	The co
1	Editor	Delete	Set up	Set up	Set up	16195077193211423	Hangzhou Yile Shangyu...	NO.100 Changda Road, Yuhang E...	张
2	Editor	Delete	Set up	Set up	Set up	16195002755811471	ddd	ddd	dd
3	Editor	Delete	Set up	Set up	Set up	15862246613281433	上海壹能	外滩	能
4	Editor	Delete	Set up	Set up	Set up	15844298780931431	上海鱼和水	移动智地	测
5	Editor	Delete	Set up	Set up	Set up	15759504513569589	测试	青岛	青
6	Editor	Delete	Modify	Set up	Set up	15693930657189711	czq	czq1	czq
7	Editor	Delete	Set up	Set up	Set up	15506715743321441	张是	杭州	张

**1, Click Pay unit and then Pay settings**

# Instruction of Background Operation



以勒新零售平台 1, 2022 ,please export the data and save in time!

Background page pay settings Refresh Operations

Receiving unit name: Receiving unit ID:

WeChat public platfo

增加收款单位

Num	Editor
1	Editor
2	Editor
3	Editor
4	Editor
5	Editor
6	Editor
7	Editor

Receiving unit: Please enter the receipt name of organization

支付宝收款:  自己收款帐号

address: Please enter address

The contact: Please enter the contact person

Contact number: Please enter your contact number

Submit immediately Reset

3, Please enter the information about new pay unit

Personal center  
Pay unit  
pay settings  
User management  
Equipment  
设备电子锁管理  
Sales record  
Sales statistics  
Goods  
PUSH  
Coffee recipe  
BUG and suggestion  
Renew manage  
System manage...

Yuhang E... 张  
dd  
熊  
测指  
青  
czq  
张

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询，请及时导出数据并保存！(Attention please)

Background page pay settings Refresh Operations

Receiving unit name : Receiving unit ID :

WeChat public platform application ID(AppID) : Allpay service window(App ID) : Query Increase

Num	Editor	Delete	Configure allpa...	Configure WeC...	配置ID卡	Receiving unit ID	Receiving unit name	address	The co
1	Editor	Delete	Set up	Set up	Set up	16195077193211423	Hangzhou Yile Shangyu...	NO.100 Changda Road, Yuhang E...	张
2	Editor	Delete	Set up	Set up	Set up	16195002755811471	ddd	ddd	dd
3	Editor	Delete	Set up	Set up	Set up	15862246613281433	上海蜜熊	外滩	熊
4	Editor	Delete	Set up	Set up	Set up	15844298780931431	上海鱼和水	移动智地	测
5	Editor	Delete	Set up	Set up	Set up	15759504513569589	测试	青岛	青
6	Editor	Delete	Modify	Set up	Set up	15693930657189711	czq	czq1	czq
7	Editor	Delete	Set up	Set up	Set up	15506715743321441	张是	杭州	张

4, After add the new pay unit, click "set up" to edit the corresponding receiving unit ID

Previous 1 Next 共7条 15条/页



# Instruction of Background Operation



以勒新零售平台 2021年1月1号之前的数据将在2022年5月1号起不

Background page pay settings Refresh Operations

Receiving unit name:  Receiving unit ID:

WeChat public platform

Num	Editor
1	Editor
2	Editor
3	Editor
4	Editor
5	Editor
6	Editor
7	Editor

### Configure alipay account

Alipay service window(App ID)

Application of the private key PKCS8

Alipay public key

Encryption type  RSA2(SHA256)  RSA(SHA1)


5, Parameters obtained according to the parameter flow

Picture of QR code

6, Click "Validated parameter", there will appear a QR code picture

Previous 1 Next 共7条 15条页

# Instruction of Background Operation

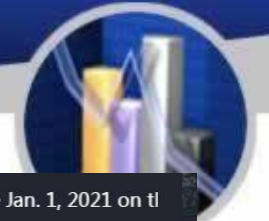

以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询，请及时导出数据并保存！(Attention please! All the data before Jan. 1, 2021 on tl

Background page pay settings Refresh Operations

Receiving unit name : Receiving unit ID :

WeChat public platform

Configure WeChat account

WeChat public platform application ID(AppID)

Please enter the App ID

WeChat pays the merchant number

Please enter WeChat pays the merchant number

WeChat pays the merchant platform API key

Please enter WeChat pays the merchant platform API key

Region  Within China  Southeast Asia  Other

Submit immediately Reset Validate parameter

It same as the operation of Alipay

Num	Editor
1	Editor
2	Editor
3	Editor
4	Editor
5	Editor
6	Editor
7	Editor

Personal center

Pay unit

pay settings

User management

Equipment

设备电子锁管理

Sales record

Sales statistics

Goods

PUSH

Coffee recipe

BUG and suggestion

Renew manage

System manageme...

Yuhang E... 张

dd

熊

测指

青5

czq

张

Previous 1 Next 共 7 条 15 条/页

# Instruction of Background Operation



以勒新零售平台

导出数据并保存! (Attention please! All the data before Jan. 1, 2021 on the LE platform will be closed on May 1, 2022 ,please export the data and save

Background page pay settings My Equipment Refresh Operations

Equipment ID: Operator number:

Equipment alias: Device type: Please select a Query Export devices

Num	Equipmen...	Transfer equi...	Configure coll...	automatic ref...	Equipment ID	Equipment alias	Pay unit (Receiving ...	Device type	Model d...
1	To view	Transfer of mac	Set up	ON	0000004068	以勒2楼	上海鱼和水(1584429...	Vending machine	LE225A
2	To view	Transfer of mac	Set up	ON	17010100001	以勒3楼	张是(1550671574332...	Vending machine	LE225

8, Choose the newly pay unit

7, After the pay unit ia added, click "Equipment" and "My Equipment"

Previous 1 / Next 共 2 条 15 条页

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起

Background page | Equipment State | My Equipment

Equipment ID:  Operator number:

Equipment alias:  Device type: Please select a

Query Export devices

Configure collection account

Equipment ID: 0000004068

Pay unit: Please select a

Submit immediately Reset

10, Finally click "submit imediately"

9, Select "configure collection account"

Num	Equipmen...	Transf	Device type	Model d...
1	To view	Tra	Vending machine	LE225A
2	To view	Tra	Vending machine	LE225

Previous 1 Next 共2条 15条/页

# Instruction of Background Operation



## 4. Management of Users

以勒新零售平台 2021年1月1号之前的数据将

Background page Operator list Refresh Operations

Operator number:  Increase

Operator name:  Query

**2, Click "Increase" to build a sub account. (Do not perform this step if you don't need it.)**

**1, Firstly click "User management" then "Operator list"**

Num	Operator n...	Delete	Editor	Operator c...	Operator n...	Describe	The contact	Contact nu...	address	Child Use ...	operator.u...	Whether to...
1	▶ 100...	Delete	Editor	Primary op...	客户培训...	客户培训	钟建	13675885...	余杭			

# Instruction of Background Operation



以勒新零售平台 Jan. 1, 2021 on the LE platform will be closed on May 1, 2022 ,please export the data and save in time!

Background page Operator list User List Refresh Operations

User name: Email: Increase  
Mobile phone: Operator number: Query

### Add User

User name: Please enter user name  
Email: Please enter email  
Mobile phone: Please enter mobile phone  
Gender:  Man  Woman  
Permissions to choose: Please select a  
Operator: Please select a  
Describe: Please enter user description

Login immediately Reset

3, Enter information about the user

4, Click "Login immediately"

Num	Delete	G...	Operator nu...	Operator name
1	Delete	W...	11576	LE-VENDING
2	Delete	W...	10013	客户培训账号
3	Delete	Man	10732	上海鱼和水
4	Delete	Man	10643	JaneChen
5	Delete	Man	10013	客户培训账号
6	Delete	Man	10013	客户培训账号
7	Delete	Man	10013	客户培训账号
8	Delete	Man	10013	客户培训账号
9	Delete	Man	10013	客户培训账号
10	Delete	Man	10013	客户培训账号
11	Delete	Man	10013	客户培训账号
12	Delete	Man	10013	客户培训账号
13	Delete	W...	10013	客户培训账号
14	Delete	Man	10013	客户培训账号
15	Delete	Man	10014	杭州以勒A

Previous 1 2 Next 共 16 条 15 条/页

# Instruction of Background Operation



以勒新零售平台

下在以勒平台开放查询, 请及时导出数据并保存! (Attention please! All the data before Jan. 1, 2021 on the LE platform will be closed on May 1, 2022 ,plea

Background page Operator list

Operator number:  Increase

Operator name:  Query

After adding new operator, click to check the sub-account.

Num	Operator n...	Delete	Editor	Operator c...	Operator n...	Describe	The contact	Contact nu...	address	Child Use ...	operator.u...	Whether to...
1	100...	Delete	Editor	Primary op...	客户培训...	客户培训	钟建	13675885...	余杭			
2	100...	Delete	Editor	Secondary...	杭州以勒A		张三	15168405...	福建福州...	USE	home.notAllow	accept
3	100...	Delete	Editor	Secondary...	金益彪11		金益彪	15057144...	浙江省杭...	Dont use	home.notAllow	accept
4	101...	Delete	Editor	Secondary...	aaaass	uy	lily	18711223...	国外国外7...	Dont use	home.notAllow	accept
5	106...	Delete	Editor	Secondary...	JaneChen	JaneChen ...	Mr. Yu	13912345...	上海市上...	Dont use	home.notAllow	accept
6	107...	Delete	Editor	Secondary...	上海鱼和水		于海明	18136762...	上海市上...	USE	home.notAllow	accept
7	107...	Delete	Editor	Secondary...	崇明岛测试		于海明	18136762...	上海市上...	Dont use	home.notAllow	accept
8	11576	Delete	Editor	Secondary...	LE-VENDI...	hangzhou	yolanda	15868108...	国外国外C...	Dont use	home.notAllow	accept

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询

Background page Operator list User List Refresh Operations

User name: Email: Increase

Mobile phone: Operator number: Query

6, Click "Increase"

5, Click "User List"

Num	Delete	Editor	Unbundling ...	Configure per...	User name	Email	Mobile phone	G...	Operator nu...	Operator name
1	Delete	Editor	Unbundling We	Set up/Modify	LE-VENDING	sales@ylvending.com	15868108956	W...	11576	LE-VENDING
2	Delete	Editor	Unbundling We	Set up/Modify	Yolanda	2758130347@qq.com	15868108956	W...	10013	客户培训账号
3	Delete	Editor	Unbundling We	Set up/Modify	于海明	397731369@qq.com	18136762042	Man	10732	上海鱼和水
4	Delete	Editor	Unbundling We	Set up/Modify	Yu	Yu@xxx.com	13912345678	Man	10643	JaneChen
5	Delete	Editor	Unbundling We	Set up/Modify	孙	23884338@qq.com	13336129870	Man	10013	客户培训账号
6	Delete	Editor	Unbundling We	Set up/Modify	卢靖宇	717603730@qq.com	13396539685	Man	10013	客户培训账号
7	Delete	Editor	Unbundling We	Set up/Modify	ceshi	f348672100@qq.com	15565652525	Man	10013	客户培训账号
8	Delete	Editor	Unbundling We	Set up/Modify	cershi	e348672100@qq.com	18865442424	Man	10013	客户培训账号
9	Delete	Editor	Unbundling We	Set up/Modify	cehi	d348672100@qq.com	15685852525	Man	10013	客户培训账号
10	Delete	Editor	Unbundling We	Set up/Modify	zkrxjeru	c348672100@qq.com	18865655252	Man	10013	客户培训账号
11	Delete	Editor	Unbundling We	Set up/Modify	ceshi1	b348672100@qq.com	18865542424	Man	10013	客户培训账号
12	Delete	Editor	Unbundling We	Set up/Modify	利叶青1	511748514@qq.com	13335818506	Man	10013	客户培训账号
13	Delete	Editor	Unbundling We	Set up/Modify	覃茵	3436944071@qq.com	17858626550	W...	10013	客户培训账号
14	Delete	Editor	Unbundling We	Set up/Modify	培训客户	1794900199@qq.com	15168405944	Man	10013	客户培训账号
15	Delete	Editor	Unbundling We	Set up/Modify	张三	zhangsan@qq.com	15168405944	Man	10014	杭州以勒A

Previous 1 2 Next 共 16 条 15 条/页



# Instruction of Background Operation



以勒新零售平台

开放查询，请及时导出数据并保存！(Attention please! All the data before Jan. 1, 2021 on the LE platform will be closed on May 1, 2022 ,please export t

Background page Operator list User List Refresh Operations

User name: Email: Increase

Mobile phone: Operator number: Query

**Add User**

User name: Please enter user name

Email: Please enter email

Mobile phone: Please enter mobile phone

Gender:  Man  Woman

Permissions to choose: Please select a

Operator: Please select a

Describe: Please enter user description

Login immediately Reset

7, choose the new user.(there will give you the choices if you add the user in last step.

Num	Delete	Editor	Operator name
1	Delete	Editor	LE-VENDING
2	Delete	Editor	客户培训账号
3	Delete	Editor	客户培训账号
4	Delete	Editor	上海鱼和水
5	Delete	Editor	JaneChen
6	Delete	Editor	客户培训账号
7	Delete	Editor	客户培训账号
8	Delete	Editor	客户培训账号
9	Delete	Editor	客户培训账号
10	Delete	Editor	客户培训账号
11	Delete	Editor	客户培训账号
12	Delete	Editor	客户培训账号
13	Delete	Editor	客户培训账号
14	Delete	Editor	客户培训账号
15	Delete	Editor	杭州以勒A

Previous 1 2 Next 共 16 条 15 条/页

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒

Background page Operator list User List Refresh Operations

User name: [input] Email: [input] Increase

Mobile phone: [input] Operator number: [input] Query

**Add User**

User name: [input] Please enter user name

Email: [input] Please enter email

Mobile phone: [input] Please enter mobile phone

Gender:  Man  Woman

Permissions to choose: [input] Please select a

Operator: [input] Please select a

Describe: [input] Please enter user description

**Login immediately** Reset

8, Click "Login immediately" after entering all information.

Num	Delete	Editor	Operator name
1	Delete	Editor	LE-VENDING
2	Delete	Editor	客户培训账号
3	Delete	Editor	上海鱼和水
4	Delete	Editor	JaneChen
5	Delete	Editor	客户培训账号
6	Delete	Editor	客户培训账号
7	Delete	Editor	客户培训账号
8	Delete	Editor	客户培训账号
9	Delete	Editor	客户培训账号
10	Delete	Editor	客户培训账号
11	Delete	Editor	客户培训账号
12	Delete	Editor	客户培训账号
13	Delete	Editor	客户培训账号
14	Delete	Editor	客户培训账号
15	Delete	Editor	杭州以勒A

Previous 1 2 Next 共 16 条 15 条/页

# Instruction of Background Operation



以勒新零售平台 2021年1月1号之前

Background page User List Refresh Operations

User name:  Email:  Increase

Mobile phone:  Operator number:  Query

客户培训 Hello!

- Personal center
- Pay unit
- User management
- Operator list
- User List**
- Equipment
- 设备电子锁管理
- Sales record
- Sales statistics
- Goods
- PUSH
- Coffee recipe
- BUG and suggestion
- Renew manage
- System manage...

9, Choose the new user add in last step to modify

Num	Delete	Editor	Unbundling ...	Configure per...	User name	Email	Mobile phone	G...	Operator nu...	Operator name
1	Delete	Editor	Unbundling We	Set up/Modify	LE-VENDING	sales@ylvending.com	15868108956	W...	11576	LE-VENDING
2	Delete	Editor	Unbundling We	Set up/Modify	Yolanda	2758130347@qq.com	15868108956	W...	10013	客户培训账号
3	Delete	Editor	Unbundling We	Set up/Modify	于海明	397731369@qq.com	18136762042	Man	10732	上海鱼和水
4	Delete	Editor	Unbundling We	Set up/Modify	Yu	Yu@xxx.com	13912345678	Man	10643	JaneChen
5	Delete	Editor	Unbundling We	Set up/Modify	孙	23884338@qq.com	13336129870	Man	10013	客户培训账号
6	Delete	Editor	Unbundling We	Set up/Modify	卢靖宇	717603730@qq.com	13396539685	Man	10013	客户培训账号
7	Delete	Editor	Unbundling We	Set up/Modify	ceshi	f348672100@qq.com	15565652525	Man	10013	客户培训账号
8	Delete	Editor	Unbundling We	Set up/Modify	cershi	e348672100@qq.com	18865442424	Man	10013	客户培训账号
9	Delete	Editor	Unbundling We	Set up/Modify	cehi	d348672100@qq.com	15685852525	Man	10013	客户培训账号
10	Delete	Editor	Unbundling We	Set up/Modify	zkrxjeru	c348672100@qq.com	18865655252	Man	10013	客户培训账号
11	Delete	Editor	Unbundling We	Set up/Modify	ceshi1	b348672100@qq.com	18865542424	Man	10013	客户培训账号
12	Delete	Editor	Unbundling We	Set up/Modify	利叶青1	511748514@qq.com	13335818506	Man	10013	客户培训账号
13	Delete	Editor	Unbundling We	Set up/Modify	覃苗	3436944071@qq.com	17858626550	W...	10013	客户培训账号
14	Delete	Editor	Unbundling We	Set up/Modify	培训客户	1794900199@qq.com	15168405944	Man	10013	客户培训账号
15	Delete	Editor	Unbundling We	Set up/Modify	张三	zhangsan@qq.com	15168405944	Man	10014	杭州以勒A

Previous **1** 2 Next 共 16 条 15 条/页

# Instruction of Background Operation



以勒新零售平台 2021年1月1号之前的数

Background page User List Refresh Operations

User name:  Email:  Increase

Mobile phone:  Operator number:  Query

Num	Delete	Editor	Unbundling ...	Configure per...	User name	Email	Mobile phone	G...	Operator nu...	Operator name
1	Delete	Editor			LE-VENDING	sales@ylvending.com		W...	11576	LE-VENDING
2	Delete	Editor						W...	10013	客户培训账号
3	Delete	Editor						Man	10732	上海鱼和水
4	Delete	Editor						Man	10643	JaneChen
5	Delete	Editor						Man	10013	客户培训账号
6	Delete	Editor						Man	10013	客户培训账号
7	Delete	Editor						Man	10013	客户培训账号
8	Delete	Editor						Man	10013	客户培训账号
9	Delete	Editor						Man	10013	客户培训账号
10	Delete	Editor						Man	10013	客户培训账号
11	Delete	Editor						Man	10013	客户培训账号
12	Delete	Editor						Man	10013	客户培训账号
13	Delete	Editor	Unbundling We	Set up/Modify	草莓	3436944071@qq.com	17858626550	W...	10013	客户培训账号
14	Delete	Editor	Unbundling We	Set up/Modify	培训客户	1794900199@qq.com	15168405944	Man	10013	客户培训账号
15	Delete	Editor	Unbundling We	Set up/Modify	张三	zhangsan@qq.com	15168405944	Man	10014	杭州以勒A

Configure permission roles

User name: LE-VENDING

Email: sales@ylvending.com

Permissions to choose: Please select a

Login immediately

10, Click "Login Immediately" to finish modifying (Sub-account has right to check the data of the machine but no modification. Administrator has right to modify the information of goods).

Previous 1 2 Next 共 16 条 15 条/页

# Instruction of Background Operation



## 5. 设备管理

以勒新零售平台

前的数据将在2022年5月1号起不在以勒平台开放查询,请及时导出数据并保存! (Attention please! All the data before Jan. 1, 2021 on the LE platform will b

Background page User List My Equipment Refresh Operations

Equipment ID: Operator number:

Equipment alias: Device type: Please select a Query Export devices

The name of machine: You are advised to set it by place name

Transfer the machine to sub-account


Num	Equipmen...	Transf equi...	Configure coll...	automatic ref...	Equipment ID	Equipment alias	Pay unit (Receiving ...)	Device type	Model d...
1	<a href="#">To view</a>	<a href="#">Transfer of mac</a>	<a href="#">Set up</a>	<input checked="" type="checkbox"/>	0000004068	以勒2楼	上海鱼和水(1584429...	Vending machine	LE225A
2	<a href="#">To view</a>	<a href="#">Transfer of mac</a>	<a href="#">Set up</a>	<input checked="" type="checkbox"/>	17010100001	以勒3楼	张是(1550671574332...	Vending machine	LE225

1, My Equipment in Equipment shows information of operator

Pay Unit

Previous 1 Next 共 2 条 15 条/页

# Instruction of Background Operation

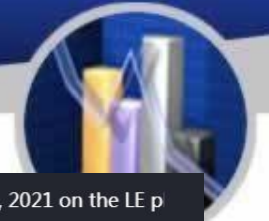

以勒新零售平台

21年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询，请及时导出数据并保存！(Attention please! All the data before Jan. 1, 2021 on the LE p

Background page User List My Equipment Refresh Operations

Equipment ID:  Operat

Equipment alias:  Devi

**Please build a account before transfer the machine.**

Num	Equipmen...	Transfer equi...	Cor
1	<a href="#">To view</a>	<a href="#">Transfer of mac</a>	
2	<a href="#">To view</a>	<a href="#">Transfer of mac</a>	

Transfer of machine

Equipment ID: 17010100001

The current device operator: 客户培训账号

Transfer operator: Please select a

[Submit immediately](#) [Reset](#)

Select the corresponding transfer operator and click "Submit Immediately" to complete transfer.(It's a way of transferring the management rights to sub-account so that the machine can be managed by sub-account, but the main account also has the rights of modifying.

Equipment State  
Equipment distributi  
Replenishment order  
Device inventory deta  
Off line recording  
设备电子锁管理  
Sales record  
Sales statistics  
Goods  
PUSH  
Coffee recipe  
BUG and suggestion  
Renew manage  
System managemen...

Transfer o... X

Previous 1 Next 共2条 15条/页

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询, 请

Background page Equipment State

Equipment ID: Operator number: Equipment alias: Device type: Please select a Query

Num	Equipment ID	Equipment alias	Device t...	Last connection t...	Cont...	当前库存/最大库存	Network type4G/...	Signal stren...	Equipmen...	Error me
1	0000004068	以勒2楼	Vending ...	2020-04-07 15:3...	A	A柜: 45/54	4G	Not connect...	Normal	OK
2	17010100001	以勒3楼	Vending ...	2019-03-11 10:4...	A	A柜: -1/-1	Unknown	Not connect...	Normal	OK

machine's type

ID number

The time connecting Internet

signal strenth

type of Internet

The machine's state can be checked in equipment state

The other information about the machine

Previous 1 Next 共 2 条 15 条页

# Instruction of Background Operation



## 6. 销售记录查询

以勒新零售平台 2021年1月1号之前的数据将在2022年5月1号

Background page | User List | My Equipment | Equipment State | **Replenishment order** | Refresh | Operations

Equipment ID:  Operator number:  Equipment alias:

2, If you enter the ID, just get the replenishment order of specific machine  
3, Selecting the machines you need to export the replenishment order for multiple machine at the same time

Notes: If don't enter the ID number, the machine defaultly export all replenishment orders.

4, Click "Export invoice" to get the replenishment order

<input type="checkbox"/>	No.	Equipment ID	Equipment alias	Shortage of orbit	current inventory/Largest inventory
<input type="checkbox"/>	1	00000004068	以勒牌	A-10,11	45/54

1, Click to get replenishment order

Replenishment order | Device inventory details | Off line recording

设备电子化管理 | Sales record | Sales statistics | Goods | PUSH | Coffee recipe | BUG and suggestion | Renew manage | System manage...

Page 1 of 2 | 共 2 条 | 15 条/页



# Instruction of Background Operation



以勒新零售平台

11号之前的数据将在2022年5月1号起不在以勒平台开放查询，请及时导出数据并保存！(Attention please! All the data before Jan. 1, 2021 on the LE platform)

Background page | User List | My Equipment | Equipment State | Replenishment order | Sales success record | Refresh | Operations

The start of time: 2022-04-13 00:00:00 The end of time: 2022-04-13 23:59:59 Operator number: Method of payment: Please select a Device type: Please select a

Goods name: Equipment alias: Equipment ID: Order ID: Query Export data

Num	Equipment ID	Equipment alias	Device t...	Order ID	Currenc...	Method ...	Payee merchant num...	Track...	Cont...	Good
无数据										

1, Click "Sales success record" in Sales record. It's the real stastic that cancle the deal sales failure

- 客户培训 Hello!
- Personal center
- Pay unit
- User management
- Equipment
- 设备电子锁管理
- Sales record
  - Sales success record
  - 销售成功记录 [新]
  - Sales failure record
  - 销售失败记录 [新]
  - Alipay trading order
  - WeChat trading orde
  - 收钱吧流水记录
- Sales statistics
- Goods
- PUSH
- Coffee recipe
- BUG and suggestion
- Renew manage
- System manageme...

# Instruction of Background Operation



以勒新零售平台

2021年1月1号之前的数据将在2022年5月1号起不在以勒平台开放查询

User List My Equipment Equipment State Replenishment order Sales success record Sales failure record Refresh Operations

Equipment ID: The start of time: The end of time: Goods name:

Order ID: Operator number: Equipment alias: Device type: Please select a Query


Export data

Num	Equipment ID	Equipment alias	Device type	Storage time(China)	Time of shipment	Order ID	data.falidR
1	0000000009	孙晴晴测试机9	Coffee machine	2019-03-20 14:07:48	2019-03-20 14:07:47	000000000919032014072101219637	
2	0000000009	孙晴晴测试机9	Vending machine	2019-03-18 10:25:30	2019-03-18 10:25:04	000000000919031810250492613196	
3	0000000009	孙晴晴测试机9	Vending machine	2019-03-18 09:26:24	2019-03-18 09:20:12	000000000919031809201296011016	
4	0000000009	孙晴晴测试机9	Vending machine	2019-03-16 12:58:15	2019-03-16 12:58:09	000000000919031612580965615385	
5	0000000009	孙晴晴测试机9	Vending machine	2019-03-16 10:47:42	2019-03-16 10:47:13	000000000919031610471351217291	
6	0000000009	孙晴晴测试机9	Vending machine	2019-03-16 10:36:11	2019-03-16 10:35:45	000000000919031610354582616573	
7	0000000009	孙晴晴测试机9	Vending machine	2019-03-16 10:35:37	2019-03-16 10:35:24	000000000919031610352485615585	
8	0000000009	孙晴晴测试机9	Vending machine	2019-03-16 10:32:13	2019-03-16 10:32:00	000000000919031610320085119119	
9	0000000009	孙晴晴测试机9	Coffee machine	2019-03-02 16:21:45	2019-03-02 16:21:44	000000000919030216213645416645	
10	0000000009	孙晴晴测试机9	Vending machine	2019-02-15 15:36:47	2019-02-15 15:36:28	000000000919021515362835818964	
11	0000000009	孙晴晴测试机9	Vending machine	2019-02-15 15:10:07	2019-02-15 15:09:39	000000000919021515093976016172	
12	0000000009	孙晴晴测试机9	Coffee machine	2019-01-28 13:11:09	2019-01-28 13:08:45	000000000919012813084056914522	
13	0000000009	孙晴晴测试机9	Coffee machine	2019-01-28 12:55:55	2019-01-28 12:51:37	000000000919012812513239917501	
14	0000000009	孙晴晴测试机9	Coffee machine	2019-01-28 12:55:54	2019-01-28 12:51:55	000000000919012812515006019137	
15	0000000009	孙晴晴测试机9	Coffee machine	2019-01-27 15:29:16	2019-01-27 15:27:09	000000000919012715265872218193	


Previous 1 2 3 Next 共 42 条 15 条/页

**If the customer in Alipay or Wechat, the deal can be checked in the Alipay/Wechat trading order**

# Installation of Operating System

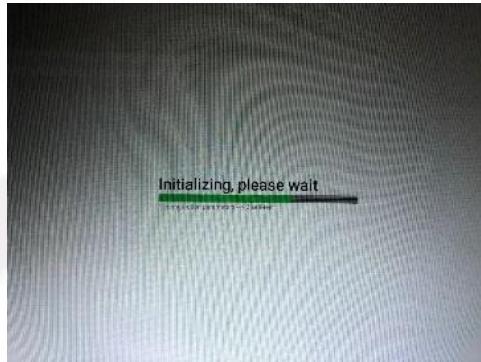


Power on the machine.

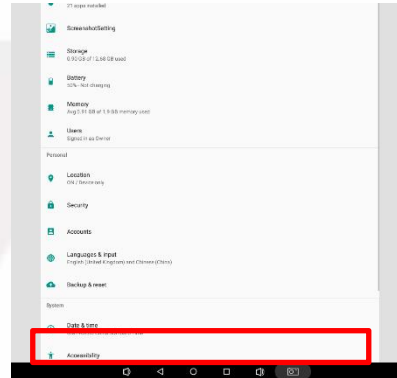


Restore factory settings and select Settings.


## Step 1 Preparation

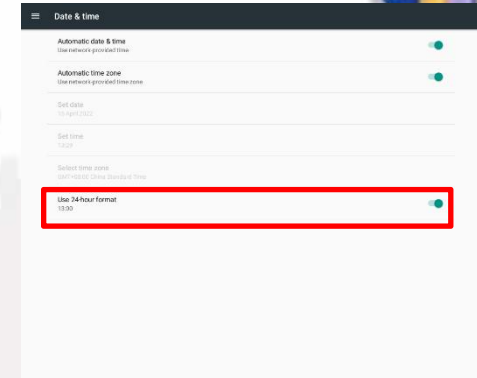


Click Date and Time, tick 24 hour mode.

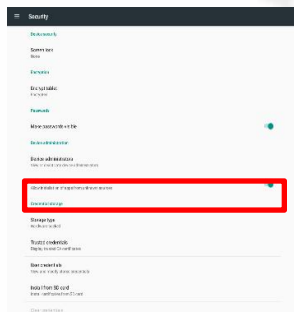

Select Security and tick Unknown Sources as shown above.

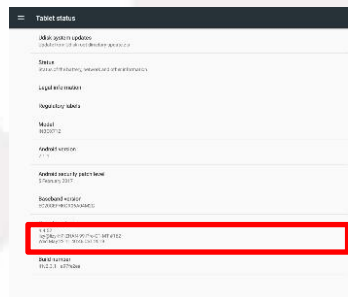

Click build number 5 to 6 times in succession and developer options will appear as shown above.

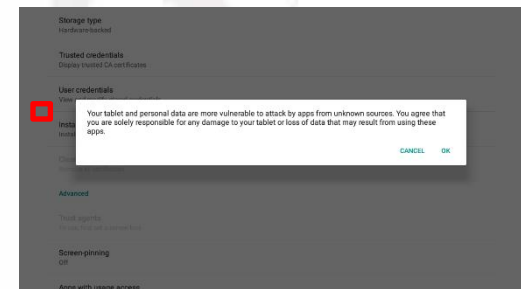

tick USB Debugging shown as above and choose "OK".

# Installation of Operating System



Prepare a USB drive with the software, and insert it into the machine.

## Step 2 Installation of software

Open File Explorer. Click the second option and select “/mnt/sdcard”. After loading, click “mnt” or click “up” sign to go back to “mnt”. Click “udisk” or “usbdisk\_1.1.1” to install the software as follows:

1. vmpush\_Vxxx.apk
2. vmself \_V xxx.apk (run the software after installation)

## Step 3 Hide the navigation bar at the bottom

Settings → Display → Display Full Screen


## Step 4 Others

Show/hide function bar:

Show function bar: Settings → Display → untick Display Full Screen, click OK to restart the screen.


Hide function bar: Settings → Display → tick Display Full Screen, click OK to restart the screen.

# Common Issues and Solutions

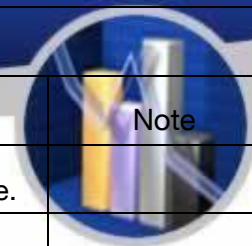

Number	Issues	Reasons	Solutions	Note
1	Beverages cannot run.	1. The recipe may not be set properly.	1、 Adjust the recipe of beverage.	
		2. Water pipe or powder pipe may be choked.	1、 Clear water pipe and powder pipe regularly to ensure smooth flow of beverage. 2、 If the grinding components are choked, please change the decompression valve.	
2	Grinding components work improperly.	1. The grinding engine may be choked by things like coffee beans.	1. Check whether there is any foreign body stuck. If so, dispose of them timely.	
		2. The shield of bean house may be shut unduely, or the door of bean house has not been opened while adding coffee beans.	1. Check whether the shield of bean house is open.	
		3. The power cord of the grinding engine may not be connected properly.	1. Check whether all the wires are connected to the grinding engine and see if there is any broken part.	
		4. The grinding drive board may not be functioning.	1. Check whether the voltage of the grinding engine is normal. If it is normal, then there is no need of replacement. 2. Change the grinding engine.	
3	Powders cannot run.	1. The electromagnet may not be working normally.	1. Check whether the wire is connected properly. 2. Change the electromagnet of the electromagnet of powder.	
		2. The canister may be choked by powder.	1. Clear the redundant powder inside the powder components.	
		3. The micro switch of the powder components may be broken.	2. Change the micro switch.	

# Common Issues and Solutions

	<p>1. The brewer may be choked or components may not be in the right place.</p>	<p>1. Clear the powder inside the brewer and reassemble the brewer.</p>	
<p>Brewing is abnormal.</p>	<p>2. There may be an issue within the engine of the brewer.</p>	<p>1. Check whether the wires are properly connected. 2. Check the engine of the brewer. There are two micro switches of the engine of the brewer. Some might be lightly misplaced. Restore their position using specific tools.</p>	
	<p>3. The engine of the brewer may be faulty.</p>	<p>1. Change the engine of the brewer.</p>	
	<p>4. The grinding driver board may not be powered.</p>	<p>1. Check whether the voltage of the driving board is normal. There is no need to change the driving board.</p>	
	<p>5. Brewing components may be choked by too much powder.</p>	<p>1. Adjust the capacity value of powder of the electromagnet.</p>	
	<p>6. The brewer may not be able to pour out the coffee grounds.</p>	<p>1. Adjust the thickness value of grinding.</p>	
	<p>The moving nozzle work improperly.</p>	<p>1. The moving nozzle may be defective.</p>	<p>1. Change the engine of the moving nozzle if it does not work.</p>
<p>2. The moving nozzle may need clearance.</p>		<p>1. Clear the moving nozzle. Test the nozzle and see whether it works within normal range of space.</p>	<p>The wires to the moving nozzle may not be connected tightly.</p>
<p>3. The micro switch of the moving nozzle may not be working.</p>		<p>1. Test and check whether the micro switch of the moving nozzle responds. If not, it should be changed.</p>	
<p>The temperature sensor is not working.</p>	<p>1. The wires may not be connected tightly.</p>	<p>1. Reconnect the wires of the temperature sensor.</p>	
	<p>1. The boiler may be overheated.</p>	<p>1. When the temperature of the boiler is too high, turn off the boiler and pull out one of the of wires connected to it. Turn on the boiler and expel air until the boiler return to normal temperature. Turn off the machine, connect the wire back to the boiler and turn on the machine.</p>	
	<p>2. The wires to the drive board may not be connected tightly.</p>	<p>1. Check whether the wires are connected to drive board.</p>	
	<p>1. The temperature sensor is broken</p>	<p>1. Change the temperature sensor.</p>	

# Common Issues and Solutions



7	No Internet Connection	1. The SIM card may have run out of credit.	1. Please recharge the SIM card.
		2. The SIM card may be broken.	1. Change the SIM card.
		3. The industrial computer may not be able to receive cellular signal.	1. Amplify the signal through moving the machine to a place where the signal condition is better.
		4. The antenna may not be in place.	1. Check whether the network cable and antenna are correctly connected.
		5. The SIM slot of the industrial computer may be defective.	1. Change Industrial Computer.
8	Cannot pay via Alipay or Wechat Pay	1. The network may not be stable.	1. Check whether the Internet connection and signal condition.
		2. The custom binding of background operation may not have been set or set properly.	1. Set up the binding and link the device ID of the machine to the background operation platform.
		3. The information of payee may have not been keyed in.	1. Bind the information of the payee along with corresponding information.
9	No electricity	1. The receptable may be unpowered.	1 Check whether the plug of the machine is powered.
		2. The power cord may be loose.	1. Check whether the wires inside the machine are connected correctly. 2. Check whether the wires to the electric filter is connected accurately.
		3. The power box of the switch may be broken.	1. Test and check it the voltage output of the power box is normal. There is no need to change the power box.
10	There is static electricity at the metal plate of the machine.	1. The machine may not be grounded.	1. Check whether the receptable is well grounded.
		2. There may be electricity leakage from the machine.	1. Check whether the wires inside the machine are properly connected in case of electricity leakage.


# Common Issues and Solutions



11	The screen does not display stably.	1. The machine may not be grounded.	1. Ground the machine.	
		2. The industrial computer may not be grounded.	1. Ground the industrial computer.	
12	No Cups	1. There may be no cups inside the cup dispenser.	1. Add cups.	
		2. The cup sensor may not be working.	1. Clear the area around the cup sensor. If the issue still exists, change the cup dispenser.	
13	The cup dispenser works improperly.	1. The dispenser may be stuck with cups.	1. Change the cup dispenser.	
		2. The range of detection of infrared sensor may be set too short or too long.	1. Adjust the range of detection.	
		3. The cup dispenser may be defective.	1. Change the cup dispenser.	
14	The cup dispenser works abnormally.	1. There may be no cups left.	1. Add cups.	
		2. The machine may need reboot to check whether the cup container revolves normally.	2. Change the cup dispenser.	
15	There is no cup dispensed.	1. There may already be a cup at the door of cup dispenser.	1. Take away the cup at the door.	
		2. There may be some foreign body at the door of cup dispenser.	2. Clear the door.	
		3. The infrared sensor may not be set properly.	1. Adjust the parameters of the infrared sensor.	
			2. Change the infrared sensor.	



# Common Issues and Solutions

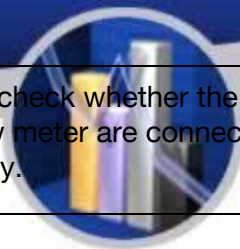

16	The record of flow meter is irregular.	1. The water inlet of the flow counter may be choked.	1. Clear the flow counter or change it.	Please check whether the wire of the flow meter are connected correctly.
			2. Check whether the solenoid valve is in normal condition.	
			3. Check whether the booster pump works normally.	
			4. Change the drive board.	
17	The boiler cannot be heated.	1. The temperature switch may has tripped. 2. The temperature sensor may be damaged. 3. The grinding drive board is not powered.	1. Push the button on the temperature switch.	Please check whether the heat wires are connected correctly
			1. Change the temperature sensor.	
			1. Check whether the voltage of the grinder drive board is 220V. There is no need to change the drive board.	
18	Powder runs normally, but sugar does not.	1. Check whether the sugar in the canister are not clustered. 2. Check whether the canisters are installed correctly. 3. The voltage of the powder engine is not stable.	1. Clear the canister and add powder anew.	Please notice whether the direction of electric current is correct.
			2. Reinstall the canisters.	
			3. Check whether the voltage of the powder engine is 24V. If not, the engine may need changing.	
19	The water level of the water tank cannot be set.	1. The micro switch may be faulty. 2. The floating ball may not be working normally.	1. Check whether the micro switch is in good condition. If not, it needs changing.	
			1. The floating ball needs cleaning or changing.	

# Common Issues and Solutions



20	The water tank works abnormally.	1. The water tank may need water.	1. Add water.	Please check whether the voltage of the water pump is 24V.
		2. The pump may not work.	2. Change the water pump.	
21	The waste water box is full.	1. The waste water box may need cleaning.	1. Clean the waste water box.	
		2. The floating ball may not work.	2. Clean the floating ball.	
		3. The micro switch may be faulty.	3. Change the micro switch.	
22	Water does not run.	1. The booster pump may not work.	1. Check whether the booster pump works normally. If not, it needs changing.	
		2. The mixing components may not work properly.	1. The mixing components need regular cleaning.	
		3. The solenoid valve may not work normally.	1. The solenoid valve needs changing if not working.	
		4. The flow meter may be choked or damaged.	1. The flow meter needs cleaning or changing.	

1. This chart lists the procedure of diagnosis and solution to common issues
2. The content is updated from time to time.

# Instruction of the Multimeter



High-precision digital multimeter vc890d, the commonly used function buttons are as follows.



To measure the DC voltage, first set the gear to DC 200v, insert the red test lead into the vΩ and temp jacks, and the black test lead into the com jack, and start measuring the 9v battery voltage. The red test lead is connected to the positive electrode, and the black test lead is connected to the negative electrode. The measurement result is about 10v, indicating that the battery is good.

# Instruction of the Multimeter



交流电压测试



To measure the AC voltage, first set the gear to AC 750v, insert the red test lead into the vΩ and temp jacks, and the black test lead into the com jack, and start measuring the AC voltage, which is normally around 220v.



二极管测量



For diode measurement, first set the gear to the diode and on-off gears, insert the red test lead into the vΩ and temp jacks, and the black test lead into the com jack. If the screen shows that the buzzer matches, press select to switch. key, the diode symbol is displayed on the screen, and the diode can be measured.



通断蜂鸣测试



For on-off measurement, first switch the gear to the diode and on-off gears, insert the red test lead into the vΩ and temp jacks, and the black test lead into the com jack. If the diode symbol is displayed on the screen, press the select switch button, Switch to the buzzer to measure continuity.

# Instruction of the Multimeter



To measure the DC current, first set the gear to 20a, insert the red test lead into the 2ma jack, the black plug into the com jack, connect the multimeter in series with the circuit under test, and measure the current.





**THANKS!**